



www.offy.pt

TECHNICAL ASSISTANCE

Regarding technical issues, please visit www.offy.pt or contact us through support@offy.pt.

CE STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Offy declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EU; 2011/65/EU; 2014/53/EU, as applicable.

 
The technical documentation required by the Conformity Evaluation Process is in Offy's possession and can be requested through support@offy.pt.

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

BATTERY CHARGING POWER

The charging power must range between a minimum of 0.1 Watts, required by the device, and a maximum of 1.15 Watts to achieve maximum charging speed.



SAFETY - EU 2023/988

Power supply: Use only the provided charging cable. Do not use damaged chargers or cables.

Battery safety: Do not expose the product to heat, fire, or direct sunlight. Never attempt to open, puncture, or replace the battery.

Wireless use: This product operates on 2.4 GHz RF and Bluetooth 5.1. Keep away from strong electromagnetic fields that may cause interference.

Environment: Avoid use in humid or dusty environments. Do not allow liquids to spill on the device.

Children: Not a toy. Keep out of reach of children and pets.



 
FLEXI MID

WIRELESS / BLUETOOTH
KEYBOARD

USER GUIDE

POWER SWITCH

Move the power switch, located at the back of the keyboard, to the ON or OFF position, according with your intentions.

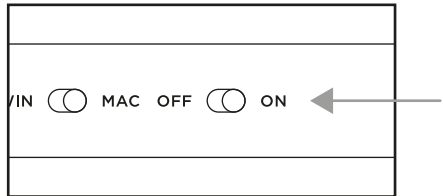

BATTERY CHARGING

The device indicator will light up when the battery status is low. At this time you should charge the keyboard's battery. We advise on using the provided cable and charging the battery through your USB-A device's port. Do not use fast charging power adapters, otherwise you may damage the keyboard's battery. Insert the USB-C plug on the keyboard and the USB-A plug onto your device.

CONNECTION MODE

The keyboard supports dual mode wireless connections: 2.4 GHz RF, through the USB-A receiver and Bluetooth 5.1. You can pair the keyboard with three different devices simultaneously. One through the 2.4 GHz RF receiver, and two through Bluetooth. You can easily change between connected devices through the connection switch.

2.4 GHZ RF CONNECTION

Plug the USB receiver onto an available USB-A port on your device.



 
Your device's operating system should automatically detect the receiver. Press the corresponding key in order to select the 2.4 GHz RF connection method.



The connection indicator (green color) will light up, showing that the connection was successful.

BLUETOOTH

Press the corresponding key in order to select Bluetooth channel 1 or Bluetooth channel 2.




The connection indicator will light up for a second (blue color), showing that the channel is active. Press and hold the key, until the light indicator starts blinking, showing that the pairing mode is active.

Open your device's operating system Bluetooth preferences. The keyboard should be detected as Offy Flexi Mid. Pair it with your device. The connection light indicator will stop blinking, showing that the connection was successful. Each Bluetooth channel can only support one paired device at a time. In order to connect to a new device through a previously used channel, you must first clear its memory. In order to do so, you should select the desired channel, press and hold the key until the connection light indicator starts blinking. You can now pair the keyboard with a new device.

MULTI DEVICE COMPATIBILITY

 
Move the switch to the WIN position for compatibility with Windows, Linux, and Android systems. Move the switch to the MAC position for operation with Mac OS and iPad OS.

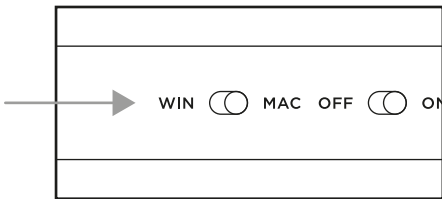

Note: As a multi-device keyboard primarily designed for Windows, some features may not be fully available or may behave slightly differently depending on the operating system and the operating system's version of the paired device.

FUNCTIONS

 DEDICATED SHORTCUT KEYS

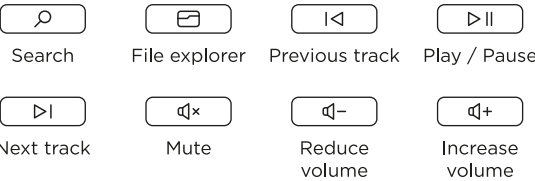

FN SHORTCUT KEYS

