



WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

Your role in separate collection

At the end of its useful life, this product must not be disposed of with unsorted household waste. As electrical and electronic equipment, it is subject to separate collection. If the battery is still inside the product, you do not need to remove it before handing over the product—battery separation, when necessary, is carried out at the waste treatment facility and not by the user.

Available collection points

Collection points that accept electrical and electronic equipment are available through participating retailers and municipal recycling centers. To find your nearest collection point, consult or contact your local municipal services.

Your role in reuse and recovery

By handing this product over for separate collection instead of disposing of it with general waste, you contribute to its reuse, recycling, and other forms of material recovery, supporting a more efficient use of resources.

Meaning of the symbol

The crossed-out wheeled bin symbol on the product and/or its packaging indicates that this item must not be disposed of as unsorted waste and must be handed over for separate collection. This symbol applies specifically to the product as electrical/electronic equipment—a battery inside the product carries its own separate symbol and obligation (refer to the battery-specific disposal information).

Impact of improper disposal

Electrical and electronic waste may contain substances and materials that pose risks to human health and the environment if not properly treated, including metals and plastics whose recovery reduces the need to extract virgin raw materials. Separate collection and recycling help prevent these negative impacts and preserve natural resources.

prevent these negative impacts.

MANUFACTURER

FJMPC Informática, Comércio e Serviços Lda – Zona Industrial de Almeirim, Lote 59, 2080-220 Almeirim, Portugal; placing the product on the EU market under its own trademark "OFFY". | Made in China.

For technical support, complaints, or to report any safety issues with this product, please visit www.offy.pt or contact us by email at support@offy.pt.



DECLARATION OF CONFORMITY WITH EUROPEAN UNION DIRECTIVES

FJMPC Informática, Comércio e Serviços Lda – Zona Industrial de Almeirim, Lote 59, 2080-220 Almeirim, Portugal, hereby declares that the radio equipment Offy Pixie – Wireless / Bluetooth keyboard (SKU: OFFYPIXIEPT) is in compliance with Directive 2014/53/EU and Directive 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://offy.pt/index.php/en/keyboards-pixie-doc-en/>

This product also complies with the applicable requirements of Directive 2012/19/EU (WEEE), Regulation (EC) No 1907/2006 (REACH), Regulation (EU) 2023/988 (General Product Safety Regulation), and Regulation (EU) 2025/40 (Packaging and Packaging Waste Regulation).

You can also access the product compliance portal via the QR code:



WASTE BATTERY INFORMATION

Extending battery life and re-use

To extend the life of the battery contained in this product, avoid exposing it to extreme temperatures, avoid full discharges whenever possible, and store the product at a partial charge (approximately 40–60%) if it will not be used for extended periods. If the product or battery is still functional but no longer needed, consider donation or re-use before proceeding to disposal.

Your role in separate collection

At the end of its life, the battery contained in this product must not be discarded together with unsorted household waste. You are responsible for delivering it to an appropriate collection point. You may hand in the product as a whole, with the battery left inside – you do not need to remove it beforehand.

Available collection points

Collection points accepting batteries are available through national battery take-back networks, participating retailers, and municipal civic amenity sites. For the collection point nearest to you, consult or contact your local municipal services.

Safety instructions

This product contains a lithium-ion battery. Do not puncture, crush, deform, disassemble, or expose the battery to temperatures above 60°C, and never dispose of it in a fire. Do not continue using the product if the battery shows signs of swelling, leakage, or damage – in such cases, handle it with care and take it directly to a collection point, avoiding skin or eye contact with any leaked substance.

Meaning of the symbols

The crossed-out wheeled bin symbol present on the battery and/or its packaging indicates that the battery must not be discarded as general waste and must instead be handed in for separate collection. If present, the chemical symbols "Cd" or "Pb" indicate that the battery contains cadmium or lead above the regulatory thresholds.

Impact of hazardous substances

Improper disposal of batteries can result in the release of hazardous substances into soil and water, posing risks to human health and the environment, and can create fire hazards within general waste streams. Separate collection and recycling help preserve natural resources and




PIXIE

WIRELESS / BLUETOOTH KEYBOARD

USER GUIDE

POWER SWITCH

Move the power switch, located at the back of the keyboard, to the ON or OFF position, according with your intentions.

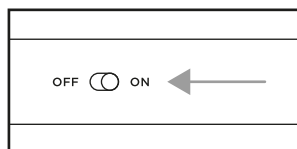

BATTERY CHARGING

The device indicator will light up when the battery status is low. At this time you should charge the keyboard's battery.

We advise on using the provided cable and charging the battery through your USB-A device's port. Do not use fast charging power adapters, otherwise you may damage the keyboard's battery. Insert the USB-C plug on the keyboard and the USB-A plug onto your device.

CONNECTION MODE

The keyboard supports dual mode wireless connections: 2.4 GHz RF, through the USB-A receiver and Bluetooth 5.1.

You can pair the keyboard with four different devices simultaneously. One through the 2.4 GHz RF receiver, and three through Bluetooth.

You can easily change between connected devices through the connection switch.

A) 2.4 GHZ RF CONNECTION



Plug the USB receiver onto an available USB-A port on your device. Your device's operating system should automatically detect the receiver. Press the corresponding key in order to select the 2.4 GHz RF connection method. The connection indicator (red color) will light up once, showing that the connection was successful.

FUNCTIONS

FN SHORTCUT KEYS

	Decrease brightness		Previous track
	Increase brightness		Play / Pause
	Desktops		Next track
	Search		Mute
	Speech recognition		Reduce volume
	Hibernate		Increase volume

SPECIFICATIONS

Layout PT **Keys** 110 **Connection** 2.4 GHz RF (USB Receiver) • Bluetooth 5.1

Radio Bluetooth radio interface: GFSK modulation, 2402–2480 MHz, maximum e.i.r.p. –6.94 dBm, integral PCB antenna, gain –0.76 dBi. 2.4 GHz RF interface, via the bundled USB wireless receiver: GFSK modulation, 2402–2480 MHz, maximum e.i.r.p. –6.94 dBm, integral PCB antenna, gain –0.76 dBi. **Operating distance** 8 m **Power input** 5 V DC / 1 A via USB


Battery Li-ion rechargeable (via USB-C) 3.7 V / 300 mAh • Working capacity: 150 hours (average) • Charging time: 2 hours (full charge) • Operating current: Working: 1.09 mA – 2.20 mA; Standby: 0.03 mA – 0.45 mA

Dimensions 421 x 117 x 15 mm **Weight** 572 g **Compatibility** Windows, Mac OS, Linux (2.4 GHz RF + Bluetooth) • iPad OS, Android (Bluetooth)

Package content Keyboard; USB Receiver; 1 m USB-A > USB-C cable

B) BLUETOOTH CONNECTION

Press the corresponding key in order to select Bluetooth channel 1, Bluetooth channel 2 or Bluetooth channel 3.

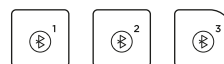


The connection indicator will light up for a second (blue color), showing that the channel is active. Press and hold the key, until the light indicator starts blinking, showing that the pairing mode is active.

Open your device's operating system Bluetooth preferences. The keyboard should be detected as Offy Pixie. Pair it with your device. The connection light indicator will stop blinking, showing that the connection was successful. Each Bluetooth channel can only support one paired device at a time. In order to connect to a new device through a previously used channel, you must first clear its memory. In order to do so, you should select the desired channel, press and hold the key until the connection light indicator starts blinking. You can now pair the keyboard with a new device.

MULTI DEVICE COMPATIBILITY

Move the switch to the WIN position for compatibility with Windows, Linux, and Android systems. Move the switch to the MAC position for operation with Mac OS and iPad OS.

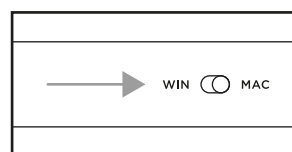

Note: As a multi-device keyboard primarily designed for Windows, some features may not be fully available or may behave slightly differently depending on the operating system and the operating system's version of the paired device.

! SAFETY INSTRUCTIONS

- Intended for indoor use only as a computer peripheral device.
- Not a toy. Contains small parts and a battery—keep out of reach of children.
- Do not expose to water, rain, excessive moisture, or heat sources.
- Charge using the provided USB cable and connect only to a USB-A port supplying 5 V DC.
- Do not use if the keyboard, cable, or USB receiver show signs of damage.
- Built-in rechargeable lithium-ion battery: do not puncture, crush, disassemble, short-circuit, or expose to fire or high temperatures.
- The battery is not user-replaceable. If it overheats, swells, or leaks, immediately discontinue product use and contact technical support.
- Turn off the keyboard and disconnect the USB adapter before cleaning. Clean only with a dry, lint-free cloth. Do not use solvents, abrasive cleaners, or aerosols.

COMMON CHARGER

This product is charged via a USB-C port and does not support fast charging. The charging power must be between a minimum of 0.1 watts required by the device and a maximum of 1.15 watts to achieve maximum charging speed. This product is not sold with a charging device.

