 


COMMON CHARGER

This product is charged via a USB-C port and does not support fast charging. The charging power must be between a minimum of 0.1 watts required by the device and a maximum of 1.15 watts to achieve maximum charging speed. This product is not sold with a charging device.



WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

Your role in separate collection

At the end of its useful life, this product must not be disposed of with unsorted household waste. As electrical and electronic equipment, it is subject to separate collection. If the battery is still inside the product, you do not need to remove it before handing over the product—battery separation, when necessary, is carried out at the waste treatment facility and not by the user.

Available collection points

Collection points that accept electrical and electronic equipment are available through participating retailers and municipal recycling centers. To find your nearest collection point, consult or contact your local municipal services.

Your role in reuse and recovery

By handing this product over for separate collection instead of disposing of it with general waste, you contribute to its reuse, recycling, and other forms of material recovery, supporting a more efficient use of resources.

Meaning of the symbol

The crossed-out wheeled bin symbol on the product and/or its packaging indicates that this item must not be disposed of as unsorted waste and must be handed over for separate collection. This symbol applies specifically to the product as electrical/electronic equipment—a battery inside the product carries its own separate symbol and obligation (refer to the battery-specific disposal information).

Impact of improper disposal

Electrical and electronic waste may contain substances and materials that

environment, and may also create fire hazards in general waste streams. Separate collection and recycling help preserve natural resources and prevent these negative impacts.

MANUFACTURER

FJMPC Informática, Comércio e Serviços Lda – Zona Industrial de Almeirim, Lote 59, 2080-220 Almeirim, Portugal; placing the product on the EU market under its own trademark "OFFY". | Made in China.

For technical support, complaints, or to report any safety issues with this product, please visit www.offy.pt or contact us by email at support@offy.pt.

CE DECLARATION OF CONFORMITY WITH EUROPEAN UNION DIRECTIVES

FJMPC Informática, Comércio e Serviços Lda – Zona Industrial de Almeirim, Lote 59, 2080-220 Almeirim, Portugal, hereby declares that the radio equipment Offy Pixie Tab – Wireless / Bluetooth keyboard with tablet stand (SKU: OFFYPIXIETABPT) is in compliance with Directive 2014/53/EU and Directive 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://offy.pt/index.php/en/keyboards-pixie-tab-doc-en/>

This product also complies with the applicable requirements of Directive 2012/19/EU (WEEE), Regulation (EC) No 1907/2006 (REACH), Regulation (EU) 2023/988 (General Product Safety Regulation), and Regulation (EU) 2025/40 (Packaging and Packaging Waste Regulation).

You can also access the product compliance portal via the QR code:



pose risks to human health and the environment if not properly treated, including metals and plastics whose recovery reduces the need to extract virgin raw materials. Separate collection and recycling help prevent these negative impacts and preserve natural resources.



WASTE BATTERY INFORMATION

Extending battery life and reuse

To extend the lifespan of the battery contained in this product, avoid exposing it to extreme temperatures, avoid complete discharges whenever possible, and store the product with a partial charge (approximately 40–60%) if not used for extended periods. If the product or battery is still functional but no longer needed, consider donation or reuse before disposing of it.

Your role in separate collection

At the end of its useful life, the battery contained in this product must not be disposed of with unsorted household waste. You are responsible for handing it over to an appropriate collection point. You may hand over the product in its entirety, keeping the battery inside—you do not need to remove it beforehand.

Available collection points

Collection points accepting batteries are available through national battery take-back schemes, participating retailers, and municipal recycling centers. To find your nearest collection point, consult or contact your local municipal services.

Safety instructions

This product contains a lithium-ion battery. Do not puncture, crush, deform, disassemble, or expose the battery to temperatures above 60 °C, and never dispose of it in fire. Do not continue to use the product if the battery shows signs of swelling, leaking, or damage—in such cases, handle it with care and take it directly to a collection point, avoiding skin or eye contact with any spilled substance.

Meaning of the symbols

The crossed-out wheeled bin symbol on the battery and/or its packaging indicates that the battery must not be disposed of as general waste and must be handed over for separate collection. If present, the chemical symbols "Cd" or "Pb" indicate that the battery contains cadmium or lead above regulatory thresholds.

Impact of hazardous substances

Improper disposal of batteries can result in the release of hazardous substances into soil and water, posing risks to human health and the




PIXIE TAB

WIRELESS / BLUETOOTH KEYBOARD WITH TABLET STAND

USER GUIDE

POWER SWITCH

Move the power switch, located at the back of the keyboard, to the ON or OFF position, according with your intentions.

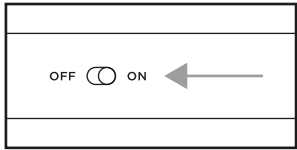

BATTERY CHARGING

The device indicator will light up when the battery status is low. At this time you should charge the keyboard's battery. We advise on using the provided cable and charging the battery through your USB-A device's port. Do not use fast charging power adapters, otherwise you may damage the keyboard's battery. Insert the USB-C plug on the keyboard and the USB-A plug onto your device.

CONNECTION MODE

The keyboard supports dual mode wireless connections: 2.4 GHz RF, through the USB-A receiver and Bluetooth 5.1. You can pair the keyboard with four different devices simultaneously. One through the 2.4 GHz RF receiver, and three through Bluetooth. You can easilly change between connected devices through the connection switch.

A) 2.4 GHZ RF CONNECTION

FN

+

Q

Plug the USB receiver onto an available USB-A port on your device. Your device's operating system should automatically detect the receiver. Press the "FN" key, along with the corresponding key in order to select the 2.4 GHz RF connection method.

Note: As a multi-device keyboard primarily designed for Windows, some features may not be fully available or may behave slightly differently depending on the operating system and the operating system's version of the paired device.

FUNCTIONS

FN SHORTCUT KEYS

 F1	Decrease brightness	 F7	Previous track
 F2	Increase brightness	 F8	Play / Pause
 F3	Desktops	 F9	Next track
 F4	Search	 F10	Mute
 F5	Speech recognition	 F11	Reduce volume
 F6	Hibernate	 F12	Increase volume
		 DEL	Lock session

The connection indicator (green color) will light up once, showing that the connection was sucessful.

B) BLUETOOTH CONNECTION


Press the corresponding key in order to select Bluetooth channel 1, Bluetooth channel 2 or Bluetooth channel 3.



The connection indicator will light up for a second (blue color), showing that the channel is active. Press and hold the keys ("FN" key + selected channel key), untill the light indicator starts blinking, showing that the pairing mode is active. Open your device's operating system Bluetooth preferences. The keyboard should be detected as Offy Pixie Tab. Pair it with your device. The connection light indicator will stop blinking, showing that the connection was sucessful. Each Bluetooth channel can only support one paired device at a time. In order to connect to a new device through a previously used channel, you must first clear its memory. In order to do so, you should select the desired channel, press and hold the key untill the connection light indicator starts blinking. You can now pair the keyboard with a new device.

MULTI DEVICE COMPATIBILITY

Move the switch to the WIN position for compatibility with Windows, Linux, and Android systems. Move the switch to the MAC position for operation with Mac OS and iPad OS.

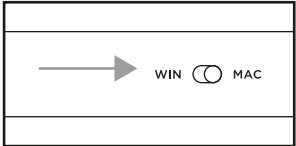

SPECIFICATIONS

Layout PT **Keys** 79 **Connection** 2.4 GHz RF (USB Receiver) • Bluetooth 5.1 **Radio** Bluetooth radio interface: GFSK modulation, 2402-2480 MHz, maximum e.i.r.p. -6.94 dBm, integral PCB antenna, gain -0.76 dBi. 2.4 GHz RF interface, via the bundled USB wireless receiver: GFSK modulation, 2402-2480 MHz, maximum e.i.r.p. -6.94 dBm, integral PCB antenna, gain -0.76 dBi. **Operating distance** 8 m **Power input** 5 V DC / 1 A via USB **Battery** Li-ion rechargeable (via USB-C) 3.7 V / 300 mAh • Working capacity: 150 hours (average) • Charging time: 2 hours (full charge) • Operating current: Working: 1.69 mA - 2.63 mA; Standby: 0.02 mA - 0.75 mA **Dimensions** 282 x 117 x 12 mm **Weight** 390 g **Compatibility** Windows, Mac OS, Linux (2.4 GHz RF + Bluetooth) • iPad OS, Android (Bluetooth) **Package content** Keyboard with tablet stand; USB Receiver; 1 m USB-A > USB-C cable

SAFETY INSTRUCTIONS

- Intended for indoor use only as a computer peripheral device.
- Not a toy. Contains small parts and a battery—keep out of reach of children.
- Do not expose to water, rain, excessive moisture, or heat sources.
- Charge using the provided USB cable and connect only to a USB-A port supplying 5 V DC.
- Do not use if the keyboard, tablet stand, cable, or USB receiver show signs of damage.
- Built-in rechargeable lithium-ion battery: do not puncture, crush, disassemble, short-circuit, or expose to fire or high temperatures.
- The battery is not user-replaceable. If it overheats, swells, or leaks, immediately discontinue product use and contact technical support.
- Turn off the keyboard and disconnect the USB adapter before cleaning. Clean only with a dry, lint-free cloth. Do not use solvents, abrasive cleaners, or aerosols.